
10G SCREWS @ MAX 600MM CTS, 8G SCREWS @ MAX 400MM IF TIMBER FRAMING IS LESS THAN 30MM DEEP. **USE NYLON ANCHOR** TO FIX TO 30MM MIN **DEPTH INTO CONCRETE** 

TIMBER SHOWN IS INDICATIVE ONLY, SEE STRUCTURAL PLAN FOR TIMBER LAYOUT

ALL SCREWS INTO TIMBER ARE TO HAVE A MINIMUM DISTANCE TO EDGE OF TIMBER OF 15MM

PANELS BIGGER THAN 2.9 SQM REQUIRE STRATCO ACP STIFFENERS AT MAX 500 MM CTS

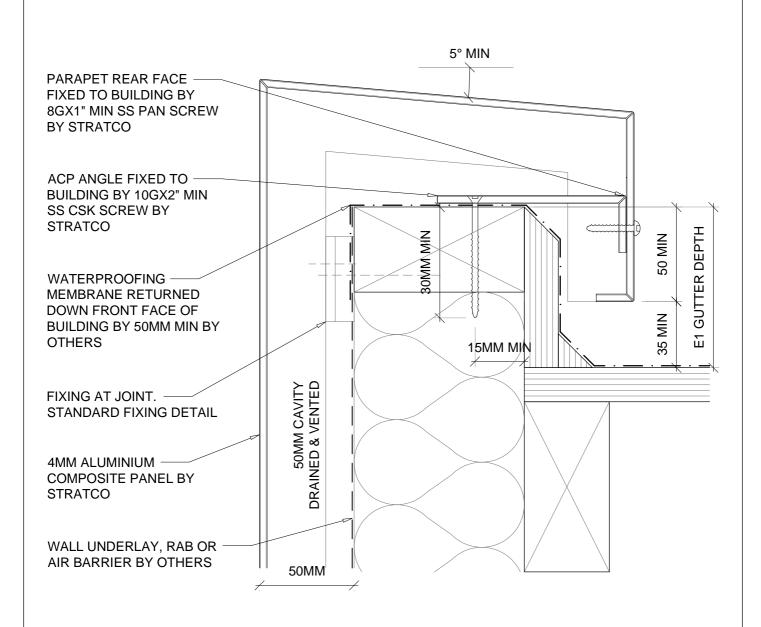

## **D3.01 PARAPET: MEMBRANE GUTTER**

D3.01 PARAPET: MEMBRANE GUTTER

JOB NAME: TBA CONTRACTOR: TBA JOB# NA QUOTE# NA

SCALE: 1:2 @A4 FILE: SEALED JOINT SYSTEM DETAILS 2017

DATE: 2017-08-07 DRAWN: AR