
10G SCREWS @ MAX 600MM CTS, 8G SCREWS @ MAX 400MM CTS IF TIMBER FRAMING IS LESS THAN 30MM DEEP, USE NYLON ANCHOR TO FIX TO 30MM MIN DEPTH INTO CONCRETE TIMBER SHOWN IS INDICATIVE ONLY. SEE STRUCTURAL PLAN FOR TIMBER LAYOUT ALL SCREWS INTO TIMBER ARE TO HAVE A MINIMUM DISTANCE TO EDGE OF TIMBER OF 15MM PANELS BIGGER THAN 2.9 SQM REQUIRE STRATCO ACP STIFFENERS AT MAX 500 MM CTS

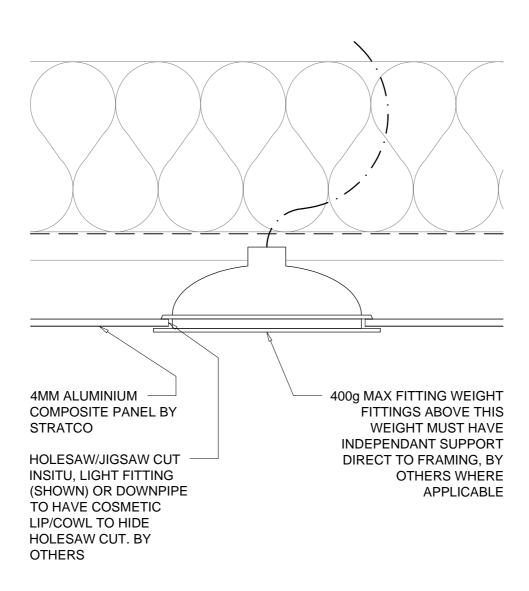

## D4.04 PENETRATION: SOFFIT LIGHTING/DOWN PIPE

D4.04 PENETRATION: SOFFIT LIGHTING / DOWNPIPE

D/TRATGO

JOB NAME: TBA
CONTRACTOR: TBA
JOB# NA QUOTE# NA

FILE: SEALED JOINT SYSTEM DETAILS 2017

DATE: 2017-08-07 DRAWN: AR

SCALE: 1:2 @A4